

Ultrathin Touch Slide RF Remote Controller

Model No.: R11,R12,R13

Touch color slide/1-3 color/Wireless remote 30m distance/CR2032 battery/Magnet stuck fix



R11
1 Zone Dimming



R12
1 Zone CCT



R13
1 Zone RGB

CE RoHS EMC LVD RED

Features

- Apply to single color, dual color or RGB LED controller.
- Ultra sensitive color adjustment touch slide.
- Each remote can match one or more receiver.
- CR2032 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be easily stuck on back holder or any metal surfaces.

Technical Parameters

Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(CR2032)
Working current	< 5mA
Standby current	< 10µA
Standby time	1 year
Remote distance	30m(Barrier-free space)

Environment	
Operation temperature	Ta: -30°C ~ +55°C
IP rating	IP20

Safety and EMC	
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11:2020
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,LVD,RED


Warranty	
Warranty	5 years

Weight	
Net weight	24g
Gross weight	64g

Shenzhen Grilight Technology Co.,Ltd
Tel:+8675527390189 Fax:+8675527397337
Web:www.grilite.com Contact: sales@grilite.com

R11,R12,R13 Ultrathin Touch Slide RF Remote Controller

Mechanical Structures and Installations

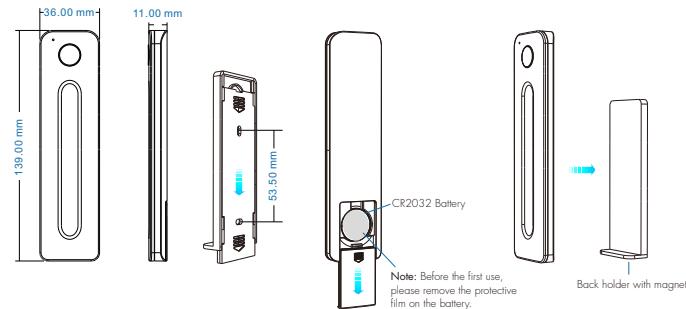

To fix the remote, three options are offered for selection:

- Option 1: stuck the remote on any metal surfaces directly.
- Option 2: fix the remote's back holder on the wall with two screws.
- Option 3: adhere the remote's back holder to the wall with poster.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:
Short press match key,
immediately press on/off key on the remote.
The LED indicator fast flash a few times
means match is successful.

Delete:
Press and hold match key for 5s to delete all match,
The LED indicator fast flash a few times
means all matched remotes were deleted.


Use Power Restart

Match:
Switch off the power, then switch on power, repeat again.
Immediately short press on/off key 3 times on the remote.
The light blinks 3 times means match is successful.


Delete:
Switch off the power, then switch on power, repeat again.
Immediately short press on/off key 5 times on the remote.
The light blinks 5 times means all matched remotes were deleted.

Key function


• R11 1 zone dimming remote

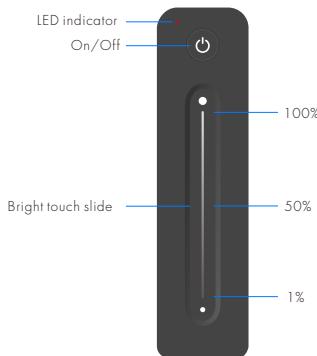

• R12 1 zone CCT remote

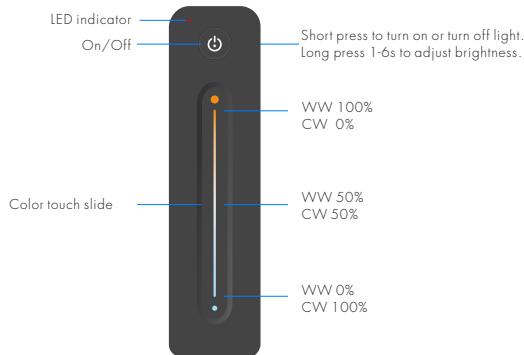

• R13 1 zone RGB remote

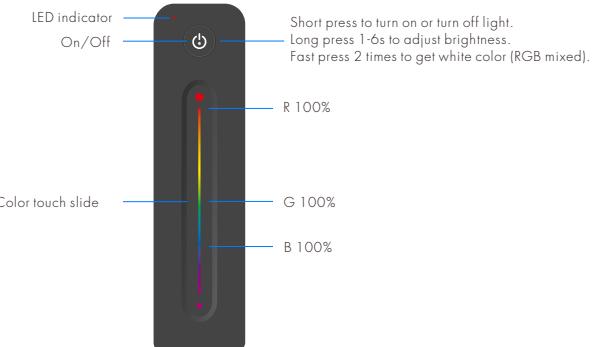

Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.
A long time without the remote control, remove the battery.
When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.