Running water Series

Tel:+8675527390189 Web:www.grilite.com Fax:+8675527397337 Contact: sales@grilight.com

COB420/m-DC24V-12MM

SPECIFICATION



420_m

24₀

Voltage

12.

FPC width

13

Power

Product features:

- ChiponBoard
- Dynamic Flowing Effects
- DotFree,PixelFree,SpotFree
- Longerlifespanwith5yearswarranty
- Support complex dynamic effects
- IP grade: IP20,IP65,IP66,IP67,IP68available CE/ROHScertification
- 256brightnessdisplay,cancontroleachpixelandsetitto anycolororanimationyouwant.














Application:

Widely used in hotels, shoppingmalls, furniture, cabinets, shelf as decoration lighting, direct lighting or indirect lighting







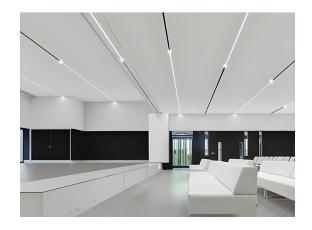










L720*W280*H410

9Kg

Product parameters:

General parameters	
Product Model	GL-R1000TF-420xCOBSIC
Color	WW,NW,CW
ССТ	3000K/4000K/6000K (Special CCT can be customized)
CRI	Ra≥90
Beam angle	120°
Cut Distance	50mm
Environmental test parameters	
IP grade	IP20
Working environment	-25℃~+45 ℃
Storage environment	-30℃~+80℃
Max connection Length	Arbitrary

Performance parameters	
Lumen(±5%)	1170lm/m
Efficiency(±5%)	90lm/w
Voltage	DC24V
Electric current	541mA/m
Power	13w/m
Packaging parameters	
A roll	5m
N.W(Roll)	0.09kg
Qty/Carton	500m

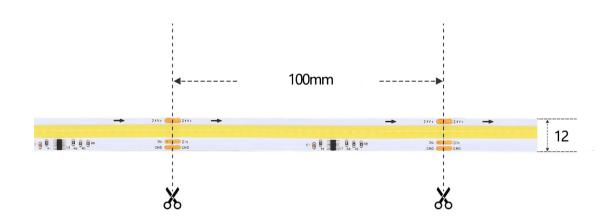

Packing size(mm)

G.W










Processing custom waterproof process:

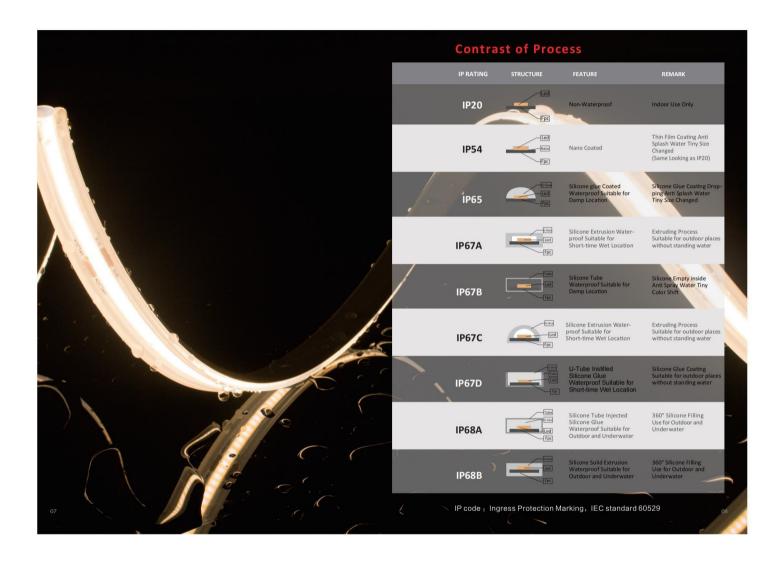












Package:

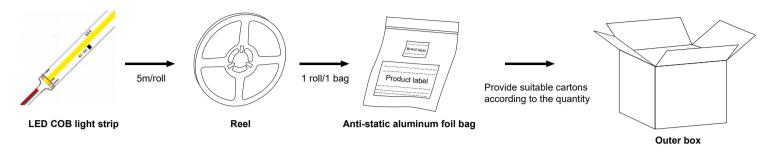


Installation diagram:

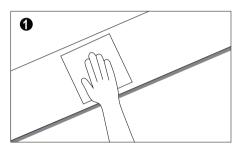

Clean the installation surface

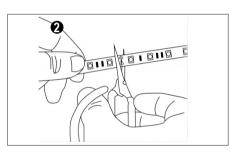


Measure the length you need toinstall, cut at the nearest scissor mark line.

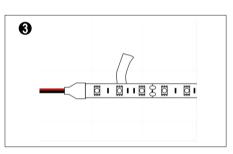


Tear off the double-sided adhesive tape on the back and paste it in a suitable position

For the left led strip, weld at the next scissor mark to connect with other connection wire.

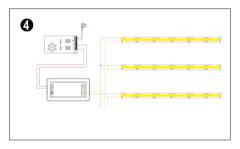

Connect the light strip wire to the driver output port (positive pole to positive pole, negative pole to negative pole)

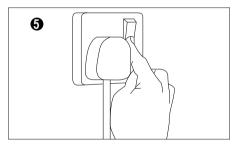

Turn on the power switch after confirming that the line is connected

Statements:

- 1). For safety, the product wire should be moved and replaced by the manufacturer, agent or other authorized person.
- 2). Please refer to the product manual before installation.
- 3). Above-refered schematic diagrams are from our standard product. Please subject to your actual product data if there is difference.
- 4). In actual use,we suggest 80% consumption of the driver. Keep 20% as power to start the led strip.
- 5). For safety, no touch the AC terminal.
- 6). Any acidic or alkaline substance is forbidden.
- 7). No notice for updated of this product.









Problem Possible reasons No power supply Give power supply. Automatic switch-off because of the open circuit and short circuit Wrong connection (positive connect with negative) Part fail Part power-supply fail Part vrong connection(positive connect negative) Part wrong connection(positive connect negative) Vector and make sure the power supply well. Check and get right connection. Check and get right connection. Use higher-power driver. Keep the strip working voltage is more or less 5% than the Rated voltage. 1. shorten the connection cable length, or change to thicker cable. 2. Make sure the strip quantity is less than the allowed connection quantity. Keep the led strip quantity of each series similar).				
All fail Automatic switch-off because of the open circuit and short circuit Wrong connection (positive connect with negative) Part power-supply fail Part circuit error Part wrong connection(positive connect negative) Check and get right connection. Check and get right connection. Veep the strip working voltage is more or less 5% than the Rated voltage. 1.shorten the connection cable length, or change to thicker cable. 2.Make sure the strip quantity is less than the allowed connection quantity. Keep the led strip quantity of	Problem	Possible reasons	solution	
All fall short circuit Solve the problem, switch on again. Wrong connection (positive connect with negative) Part power-supply fail Part circuit error Part wrong connection(positive connect negative) Part wrong connection(positive connect negative) Part wrong connection(positive connect negative) Check and make sure the power supply well. Check and get right connection. Check and get right connection. Was higher-power driver. Keep the strip working voltage is more or less 5% than the Rated voltage. 1.shorten the connection cable length, or change to thicker cable. 2.Make sure the strip quantity is less than the allowed connection quantity. Keep the led strip quantity of	All fail	No power supply	Give power supply.	
Part fail Part power-supply fail Part circuit error Part wrong connection(positive connect negative) Overload of the driver Use higher-power driver. Keep the strip working voltage is more or less 5% than the Rated voltage. 1.shorten the connection cable length, or unbalanced power consumption from different strip series. Too big power consumption from different strip series.		·	Solve the problem, switch on again.	
Part fail Part circuit error Part wrong connection(positive connect negative) Overload of the driver Use higher-power driver. Keep the strip working voltage is more or less 5% than the Rated voltage. 1.shorten the connection cable length, or change to thicker cable. 2.Make sure the strip quantity is less than the allowed connection quantity. Keep the led strip quantity of		Wrong connection (positive connect with negative)	Check and get right connection.	
Part fail Part wrong connection(positive connect negative) Check and get right connection. Use higher-power driver. Keep the strip working voltage is more or less 5% than the Rated voltage. 1.shorten the connection cable length, or change to thicker cable. 2.Make sure the strip quantity is less than the allowed connection quantity. Keep the led strip quantity of		Part power-supply fail	·	
overload of the driver Use higher-power driver. Keep the strip working voltage is more or less 5% than the Rated voltage. 1.shorten the connection cable length, or change to thicker cable. 2.Make sure the strip quantity is less than the allowed connection quantity. Keep the led strip quantity of	Part fail	Part circuit error		
Inconsistent brightness or insuffiscent brightness • Too big power consumption of the switch, or unbalanced power consumption from different strip series. • Too big power consumption of the switch, or unbalanced power consumption from different strip or change to thicker cable. 2.Make sure the strip quantity is less than the allowed connection quantity. Keep the led strip quantity of		Part wrong connection(positive connect negative)	Check and get right connection.	
Too big power consumption of the switch, or unbalanced power consumption from different strip series. Too big power consumption of the switch, or unbalanced power consumption from different strip series. or less 5% than the Rated voltage. 1.shorten the connection cable length, or change to thicker cable. 2.Make sure the strip quantity is less than the allowed connection quantity. Keep the led strip quantity of	brightness or insuffiscent	overload of the driver	Use higher-power driver.	
		unbalanced power consumption from different strip	or less 5% than the Rated voltage. 1.shorten the connection cable length, or change to thicker cable. 2.Make sure the strip quantity is less than the allowed connection quantity. Keep the led strip quantity of	
● Too many Led strips connection Adjust the led strip quantity, make sure sufficient power supply.		Too many Led strips connection		
Poor welding connection of wires Check,find and solve it.	LED flash	Poor welding connection of wires	Check,find and solve it.	
switch problem Change to right switch.		switch problem	Change to right switch.	